




QUICK ATTACH

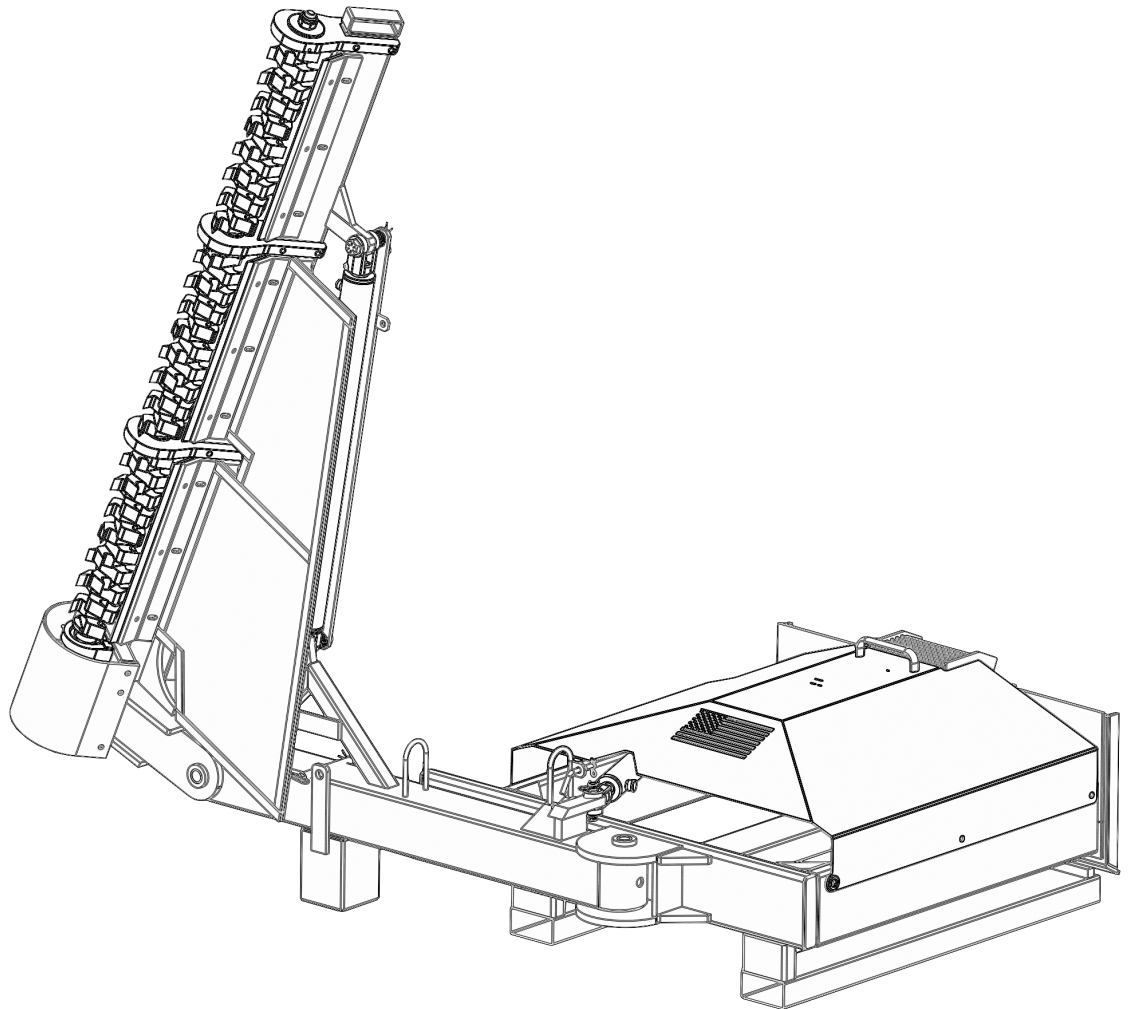

LIMB

CUTTER 6

Operator's Manual

Maintenance & Parts Information



Read this Manual Before Use

Table Of Contents

1. Introduction.....	3
2. Specifications	4
3. Safety.....	5
3.1 Operation Hazards	5
3.1.1 Do Not Allow Riders	7
3.1.2 Hazards From Modifying Equipment	7
3.2 Maintenance Hazards	7
3.2.1 Lockout/Tagout.....	7
3.3 Safety Decals	8
4. Setup.....	9
4.1 Hydraulic Hoses.....	9
4.2 Electrical Harness (If Equipped).....	9
5. Operation.....	12
5.1 Attach To Carrier	12
5.2 Detach From Carrier	13
5.3 Transporting	13
5.4 Daily Inspections	13
5.5 Operating Limb Cutter 6.....	14
6. Maintenance.....	16
6.1 Lubrication	16
6.2 Replace Cutting Teeth Or Drum Bearing	17
7. Troubleshooting	18
8. Parts.....	20
9. Warranty	24

Introduction

1. Introduction

Congratulations on your purchase of a Quick Attach limb cutter.

Carefully examine the Limb Cutter 6 upon receipt. Report any damage immediately to the freight carrier and register any claim.

Read and understand this manual before using the Limb Cutter 6 and follow all of the safety instructions. Keep this manual with the Limb Cutter 6 at all times.

Read and understand the carrier operators manual before operation and follow all of the safety instructions.

Information provided in this manual was current as of the issue date. Quick Attach reserves the right to make design changes without further notice or liability.

This manual explains the operation and routine maintenance of the Limb Cutter 6.

Information furnished in this manual does not include all of the details of design, production, or variations of the equipment. It does not cover all the possible contingencies, which may arise during operation, setup, or maintenance. Should special issues arise, or further information be desired, please contact Limb Cutter 6.

The text contained in this manual is for current production models. Some instructions and maintenance procedures may not apply to your specific unit.

Equipment modifications from original design and specifications are strictly prohibited. Modifications or overloading may compromise safe operation of the Limb Cutter 6, subjecting users to serious injury or death and may void any remaining warranty.

Quick Attach reserves the right to change, improve, modify or expand features of this equipment at any time. Specifications, models, or equipment are subject to change without notice, and without incurring any obligations to change, improve or expand features of previously delivered equipment. Because of the variations in optional equipment and continued design improvement, certain information contained within this manual may not apply.

This operators manual does not replace, nor does its use release the owner/operator from observing all safety codes or operating limitations as well as any applicable federal, state, provincial or local regulations.

The Limb Cutter 6 is designed to be used by experienced operators, trained in the safe operation of a carrier and trained in the hazards related to using the Limb Cutter 6, and the safe use of the Limb Cutter 6 for the intended purpose.

Serious injury or death of the operator or bystanders may be caused if the Limb Cutter 6 is misused.

Misuse may also cause damage to the carrier carrying the Limb Cutter 6.

Operator Orientation - The directions left, right, front and rear, as mentioned throughout this manual, are as seen from the operator's platform and facing in the direction of travel.

Specifications

2. Specifications

Cutting Path..... 72 in.
Rotor Speed3000 RPM
Cutting Teeth52
Recommended Hydraulic Flow..... 30-45 GPM
Maximum Limb Diameter..... 6 in.
Weight 1500 lbs

Safety

3. Safety

Before setting up, operating or servicing the Limb Cutter 6, you must read, understand and follow the instructions and safety warnings in this manual. Your machine may not be equipped with some of the optional equipment described in this manual.

If you have any safety concerns or questions that are not covered by this manual, please contact Quick Attach.

The safety information in this manual is denoted by the safety alert symbol: **▲** This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

The level of risk is indicated by the following signal words:

▲ DANGER

Indicates a hazardous condition that will result in serious injury or death if not performed appropriately.

▲ WARNING

Indicates a hazardous condition that could result in serious injury or death if not performed appropriately.

▲ CAUTION

Indicates a hazardous condition that could result in serious injury if not performed appropriately.

NOTICE

Indicates a situation that could result in damage to the machine or other property.

3.1 Operation Hazards

The following hazards are possible during the operation of the Limb Cutter 6. All operators, maintenance and service personal, or any one working with or near the Limb Cutter 6 must be familiar all hazards.

▲ DANGER

Prevent electrocution.

Death or serious injury can result if equipment comes near or contacts power lines.

Electrocution can occur without direct contact.

▲ WARNING

Do not operate the Limb Cutter 6 until you read and understand this manual.

▲ WARNING

Do not operate, work on or around Limb Cutter 6 while under the influence of alcohol, prescription or nonprescription medication, or if feeling ill.

▲ WARNING

Entanglement and severing hazard.

Disengage hydraulic flow and allow cutting head to stop before leaving operators seat.

▲ WARNING

Prevent death or serious injury.

Do not exceed carrier rated operating capacity.

Safety

WARNING

Prevent death or serious injury.

Operate the Limb Cutter 6 with a carrier equipped with a Roll-Over Protective Structure (ROPS). The carrier must be equipped with an operator enclosure.

WARNING

Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

WARNING

Wear personal protective equipment appropriate for the job.

WARNING

This product can expose you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov/product.

WARNING

Crush hazard.

A raised Limb Cutter 6 can fall, resulting in death or serious injury.

Never enter the area under a raised Limb Cutter 6.

WARNING

Do not make any alterations to this machine. Altering may cause machine to be unsafe and may void the manufacturers' warranty.

Always use Quick Attach replacement parts. Not using Quick Attach parts may void the warranty and/or cause harm to personnel or machine.

WARNING

Safety is the responsibility of the operator.

Verify your carrier's safety features, including ROPS and FOPs meet your job safety requirements.

WARNING

Prevent death or serious injury.

Do not attempt to operate Limb Cutter 6 using forks through forklift pads.

Forklift pads are for handling and storage only.

Safety

NOTICE

Do not use this equipment for any other purpose than it was designed.

Using this equipment for any other purpose could result in damage to equipment or injury to personnel.

Carefully read all safety messages in this manual.

New equipment components and repair parts must include the current safety decal.

Learn how to properly operate this equipment.

Never operate or work around this equipment without proper instruction, while fatigued or under the influence of alcohol, prescription or nonprescription medication, or if feeling ill.

Keep your equipment in proper working condition. Know the regulations and laws that apply to you and your industry. This manual is not to replace any regulations or laws. Additional information may be found at: www.asae.org or www.osha.gov. If you do not understand any part of this manual, contact Quick Attach.

3.1.1 Do Not Allow Riders

Never lift or carry anyone on the Limb Cutter 6. Never use the Limb Cutter 6 as a work platform. Never allow riders on the Limb Cutter 6.

3.1.2 Hazards From Modifying Equipment

Do not make any alterations to the Limb Cutter 6. Altering the Limb Cutter 6 may cause unsafe conditions and may void the manufacturer's warranty. Always use Quick Attach replacement parts.

3.2 Maintenance Hazards

The following maintenance and service hazards are in addition to those found while operating the Limb Cutter 6. All operators, maintenance and service personnel, or any one working with or near the Limb Cutter 6 must be familiar of all hazards. If you do not understand any part of this manual, contact Quick Attach.

After performing inspections, service or maintenance, all guards must be reinstalled and verify all safety devices are functional.

Wear personal protective equipment appropriate for the job.

Always use Quick Attach replacement parts. Not using Quick Attach parts may cause harm to personnel and may void the warranty.

3.2.1 Lockout/Tagout

WARNING

Entanglement and crush hazard.

Keep all personnel clear of all moving components.

Verify all guards are in place.

Follow lockout/tagout procedure before performing service, inspections or maintenance.

Before performing service or maintenance:

- If Limb Cutter 6 is connected to carrier:
 1. Park on a firm and level surface.
 2. Lower Limb Cutter 6 to ground.
 3. Set parking brake.
 4. Stop engine and remove key.
 5. Place a Do Not Operate tag on control panel.
- If Limb Cutter 6 is not connected to carrier:
 1. Verify Limb Cutter 6 is on firm and level ground.

Safety

3.3 Safety Decals

Safety decals are located on the equipment to identify both operational and maintenance hazards.


These safety decals are placed according to the hazard in that area of the machine.

Read and understand each safety decal and the hazard it references.

These safety decals are additional information to the safety content already described in this section of the operator's manual.

All safety decals must be legible at all times. Keep them clean by using a mild soap and water, avoid using harsh chemicals or pressure washing. If the safety decal is no longer legible, replace it with a new one.

Contact Quick Attach for new decals.

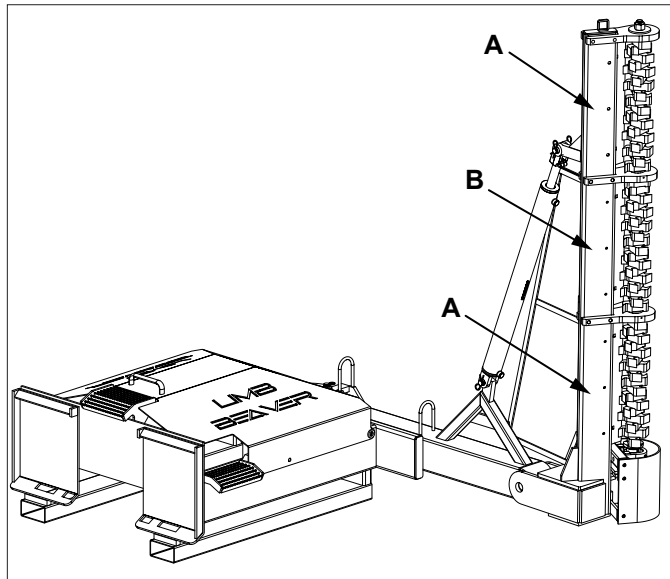

Decal A - LBD-002



Decal B - LBD-003



Setup

4. Setup

4.1 Hydraulic Hoses

Skid Steer Model: Limb Cutter 6 is equipped with hoses to connect to skidsteer hydraulic system. Route hydraulic hoses and wiring harness (if equipped) out the side of the platform.

Excavator Model: Hoses to connect excavator to the Limb Cutter 6 hydraulic system are not provided. Male hydraulic quick couplers are provided.

The motor supply and return hoses must be 3/4 in. high pressure hydraulic hose, 3000 psi or higher.

The case drain hose must be 3/8 in. high pressure hydraulic hose, 3000 psi or higher.

Refer to the excavator operators manual or contact the dealer for information on where the pressure, return and case drain couplers on carrier are located.

Hoses must be long enough to allow for tilting and folding of the unit, and fitted with a mated female coupler.

NOTICE

Prevent equipment damage.

Route hydraulic hoses in a safe location to avoid damage.


All Models: Perform an initial startup and carefully move Limb Cutter 6 to all positions to verify hoses and electrical harness will not be damaged. Reroute if damage may occur.

4.2 Electrical Harness (If Equipped)

The electrical harness is shipped with a standard pin-out which is the most common for carriers.

For Cat D Series, move blue wire from pin G to pin A, and move white wire with black strip from pin H to pin J.

For John Deere, move black wire from pin B to pin A.

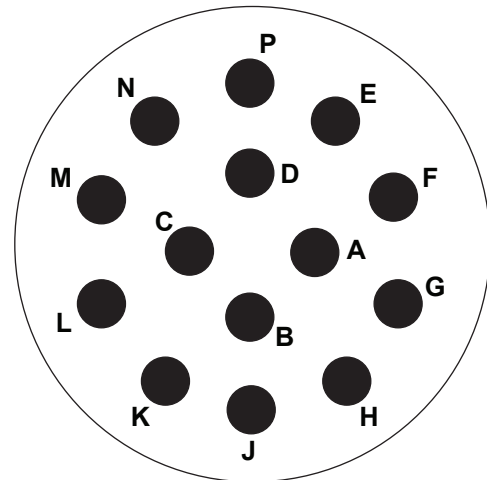

Note: See chart on next page for connector pin layout for various carriers.

To Move Connector Pins:

1. Loosen two slotted screws on back of connector.
2. Twist top of the strain relief until it comes off. Using a long slender screwdriver, remove plug from pin location where a pin will be moved to.
3. Locate plastic pin tool included in your kit.
4. Gently slide this tool around the wire to be moved and slowly slide it down the wire and into the rubber boot. You will feel it restrict and tighten. Rotate slightly while pushing to feel a click as locking collar disengages. If this does not happen, pull it back and try again or add some water-soluble lubricant. Never force it. Once locking collar disengages, pull on wire or use a tool to push socket out from the face side.
5. Slide socket into the new position and make sure it seats so that you can see it on the face of the connector.
6. Reinstall strain relief and tighten screws.

Setup

Pin →	A	B	C	D	E	F
Bobcat 14 Pin	LH I/R	(-) Ground	LH Center-L	LH Center-R	LH Right-Up	LH Right-On
Case 14 Pin	N/A	(-) Ground	Button 2 LH Handle - Dn	Button 2 LH Handle - Up	Button 1 RH Right - Up	Button 1 RH Right - Dn
Cat 14 Pin		(-) Ground	C+ Control-Aux S - Lower Right Button	C+ Control-Aux S - Upper Right Button	C2 Control - Aux 4	C1 Control - Aux 3
JCB/Volvo 14 Pin	N/A	(-) Ground	C-SW Fwd	C-SW Bwd	D-SW Fwd	D-SW Bwd
John Deere	(-) Ground	N/A	Right Down	Left Down	Left Up	Dash Right
Kubota 14 Pin SVL 75/85/95 2017 And Prior	N/A	(-) Ground	LH Switch	RH Switch	N/A	N/A
Kubota 14 Pin SSV Controls 2017+ Hand/Foot	N/A	(-) Ground	LH Stick Center Toggle Down	LH Stick Center Toggle Up	RH Stick Left Button	RH Stick Right Button
Kubota 14 Pin SSW Controls 2017+ ISO	N/A	(-) Ground	Left Stick Left Switch	Left Stick Right Switch	Right Stick Toggle Left	Right Stick Toggle Right
Kubota Ext 14 Pin Add-On KIL Plastic Button	N/A	(-) Ground	Button #1	Button #2	Button #3	Button #4
New - NH 14 Pin	N/A	(-) Ground	LH #3 - Dn	LH #3 - Up	RH #1 - Up	RH #1 - Dn
Old - NH 14 Pin	N/A	(-) Ground	SW 3 Mom Dn	SW Mom Up	SW 1 Mom Up	SW 1 Mom Dn
Takeuchi	N/A	(-) Ground	SW 1 Up - R Joy/L Up	SW 1 Up - R Joy/L Down	SW 2 Up R Joy/R Up	SW 2 Dn R Joy/R Dn
Yanmar	N/A	(-) Ground	SW 1 Up	SW 1 Dn	SW 2 Up	SW 2 Dn
Mustang	N/A	(-) Ground	SW 1 Up	SW 1 Dn	SW 2 Up	SW 2 Dn
Gehl	SW 4	(-) Ground	SW 1 Up	SW 1 Dn	SW 2 Up	SW 2 Dn
Terex	(-) Ground	LH-SW Dn	LH - Right	LH Left	(-) Ground	? SW
Wacker 14 Pin	N/A	(-) Ground	LH Center-L	LH Center-R	LH Right-Up	LH Right-Dn

Setup

G	H	J	K	L	M	N	P
RH - LS Up	RH - LS On	Open	(+) 12 V	Aux Hy En Jumper K To L To Lockout Hyd Pump Cont	Open	Open	Open
Button 3 LH Handle-Up	Button 3 LH Handle-On	Signal Power	Keyed (+) 12 V	EHP Interlock	N/A	N/A	N/A
N/A	N/A	Aux + Switch ON/ Off Locking	For XPS Machine HF Jumper B-K	N/A	N/A	For XJP Machine HF Jumper B-N	N/A
F-SW Fwd	F-SW Bwd	N/A	(+) 12 V	N/A	N/A	N/A	N/A
Right Up	Left Down	N/A	N/A	N/A	N/A	N/A	N/A
N/A	N/A	N/A	(+) 12 V	N/A	N/A	N/A	N/A
RH Stick L Up/Down Toggle Up	RH Stick L Up/Down Toggle Dn	Elec Mode Change	(+) 12 V	N/A	N/A	N/A	N/A
L Stick Toggle R	L Stick Toggle L	Elec Mode Change	(+) 12 V	N/A	N/A	N/A	N/A
Button #6	Button #6	Button #1 Not Supplied	(+) 12 V	N/A	N/A	N/A	N/A
Handle #2 Up	Handle #2 Down	On/Off Att Signal Pwr	(+) 12 V	N/A	N/A	N/A	N/A
SW 2 Mom Dn	SW 2 Mom Up	On/Off	(+) 12 V	N/A	N/A	N/A	N/A
Console	Console	R Joy Trig Must Repin	(+) 12 V	N/A	N/A	N/A	N/A
SW 3 Up	SW 3 Dn	N/A	(+) 12 V	N/A	N/A	N/A	N/A
SW 3 Up	SW 3 Dn	N/A	(+) 12 V	N/A	N/A	N/A	N/A
SW 3 Up	SW 3 Dn	N/A	(+) 12 V	N/A	N/A	N/A	N/A
LH - Up	N/A	N/A	(+) 12 V	N/A	N/A	N/A	N/A
N/A	N/A	N/A	(+) 12 V	N/A	N/A	N/A	N/A

Note: The wire colors shown are for reference when setting up your carrier. Each wire aligns with a pin control on carrier electrical system. Depending on how your carrier was ordered, you may or may need to re-pin the connector to operate the Limb Cutter 6.

Operation

5. Operation

5.1 Attach To Carrier


⚠ WARNING

Prevent death or serious injury.

Do not attempt to operate Limb Cutter 6 using forks through forklift pads.


Forklift pads are for handling and storage only.

Do not attempt to operate Limb Cutter 6 using forks through forklift pads (A).

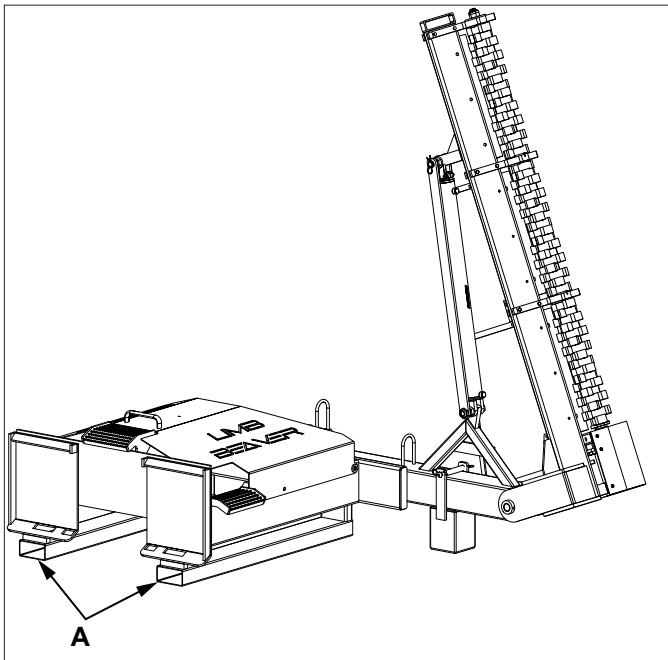

1. Verify the mount plate and receiver plate are free of any dirt or debris and that the locking mechanism pins rotate freely. Lubricate locking mechanism if necessary.

2. Skidsteer: Tilt carrier mount plate (B) forward. Position mount plate into the upper lip (C) of the receiver plate. Raise carrier loader arms slightly while tilting mount plate back at the same time. The Limb Cutter 6 should be raised slightly off the ground with the mount plate (B) tilted all the way back.

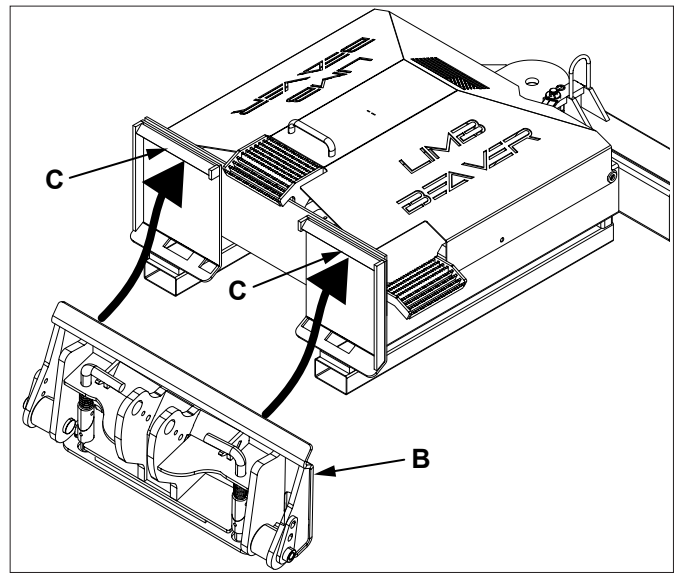

Excavator: Attach Limb Cutter 6 to excavator. See excavator operator's manual.

3. Stop carrier engine.

⚠ WARNING

Crush hazard.

If locking mechanism pins are not fully seated, the Limb Cutter 6 could fall off of the carrier, crushing you or bystanders.

Locking mechanism pins must be fully seated through the Limb Cutter 6 receiver plate.

4. Skidsteer: Engage locking mechanism pins. Verify pins are fully seated through receiver plate.

Excavator: Verify pins are secure to lock Limb Cutter 6 to excavator mount.

Operation

⚠ WARNING


Pressurized fluids can penetrate the skin.

Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

5. Route hydraulic hoses and wire harness through the opening (D) in platform cover. Connect pressure, return and case drain hydraulic hoses. Confirm hydraulic connections are secure.

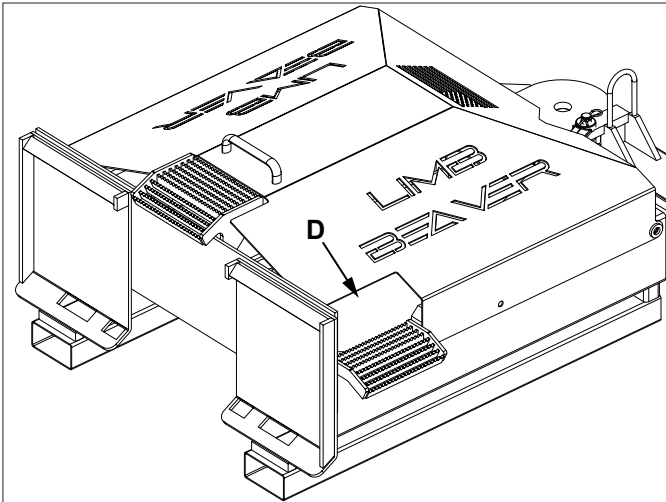

6. If equipped, connect electrical harness.
7. Verify hydraulic hoses and electrical harness are clear of pinch areas and moving parts.

5.2 Detach From Carrier

1. Lower Limb Cutter 6 on to a flat level surface.
2. Stop carrier engine and relieve hydraulic pressure.
3. Disconnect hydraulic hoses.
4. Disengage locking mechanism pins.
5. Tilt carrier mount plate forward and back carrier away from Limb Cutter 6.

5.3 Transporting

⚠ WARNING

Prevent death or serious injury.

Keep Limb Cutter 6 close to the ground. Operation with a raised Limb Cutter 6 may result in carrier rollover.

1. Raise Limb Cutter 6 slightly off the ground.
2. Travel at a reasonable and safe speed.

5.4 Daily Inspections

Thoroughly inspect the Limb Cutter 6 before each operation.

Verify all safety signs are in place and clearly visible.

Check for loose or missing parts and any damage that may have occurred during operation, moving or shipping.

Check cutting teeth for wear or damage. Replace worn or damaged cutting teeth.

Review all carrier pre-start instructions and verify that all recommended steps and procedures have been followed.

Operation

5.5 Operating Limb Cutter 6

DANGER

Prevent electrocution.

Death or serious injury can result if equipment, tree or brush comes near or contacts power lines.

Electrocution can occur without direct contact.

WARNING

Prevent death or serious injury.

Only experienced and properly trained operators may operate carrier and Limb Cutter 6.

WARNING

Prevent death or serious injury.

Keep bystanders 300 feet away from Limb Cutter 6 during operation.

WARNING

Entanglement and severing hazard.

Keep away from moving parts

WARNING

Moving parts can crush and dismember.

Disconnect and lockout power source before adjusting or servicing.

WARNING

Do not operate, work on or around Limb Cutter 6 while under the influence of alcohol, prescription or nonprescription medication, or if feeling ill.

WARNING

Entanglement and severing hazard.

Disengage hydraulic flow and allow cutting head to stop before leaving operators seat.

WARNING

Prevent death or serious injury.

Do not attempt to operate Limb Cutter 6 using forks through forklift pads.

Forklift pads are for handling and storage only.

NOTICE

Prevent equipment damage.

If carrier is equipped with a low/high flow hydraulic system, operate Limb Cutter 6 on low flow.

1. Attach Limb Cutter 6 to carrier. See Attach To Carrier in this section.
2. Inspect work area for obstructions, power lines and other obstacles. Also inspect the area where the carrier will travel for holes, ruts and other obstacles that could effect the stability of the carrier.

Operation



⚠ WARNING

Prevent injury.


Do not stand next to cutting head when removing or installing transport strap.

Cutting head could fall when transport strap is removed or installed.

3. Remove lock pin and pivot transport strap (A) down and pin to bracket on swing frame. Stow lock pin for reinstallation after use.

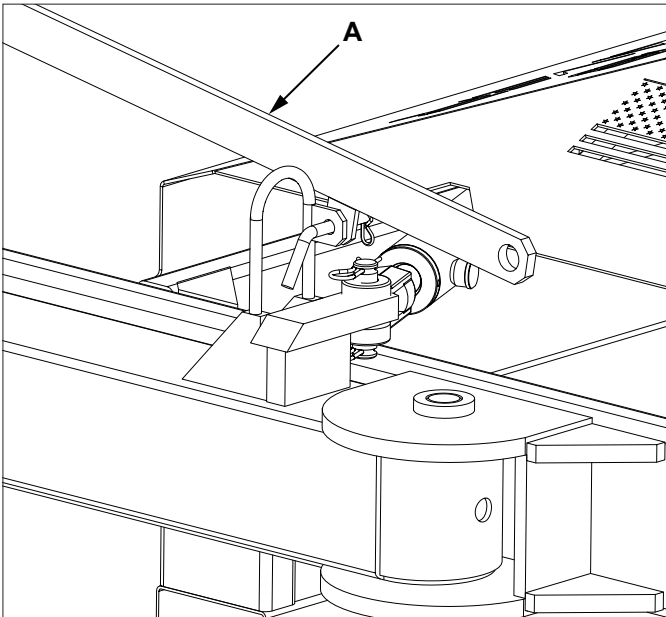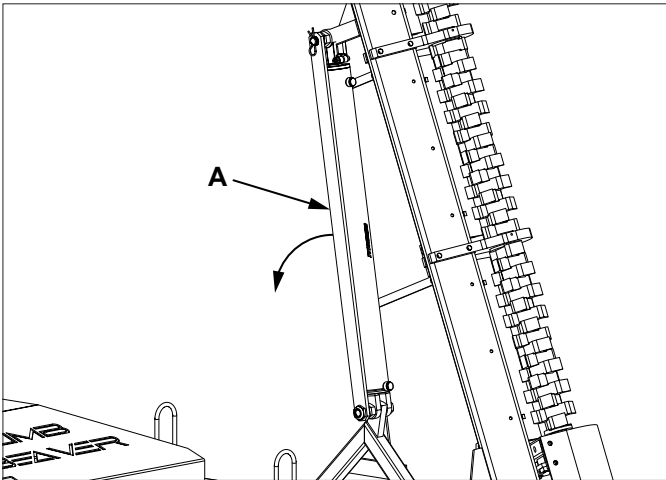

4. Remove lock pin and pin (B). Remove support stand (C) and stow for reinstallation after use.

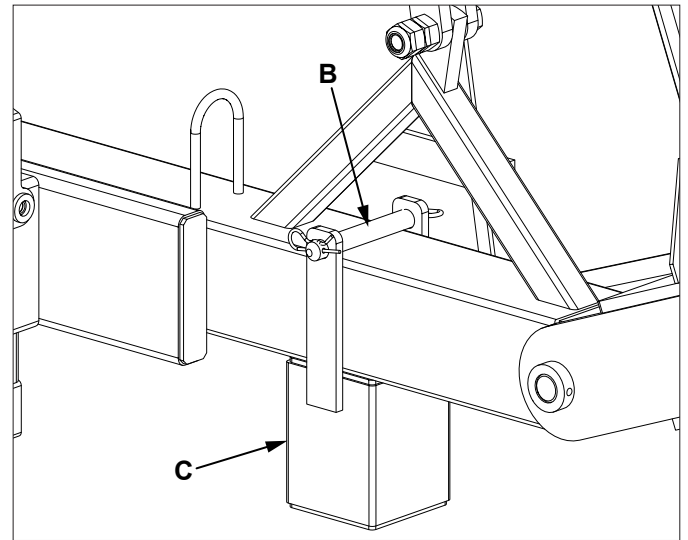

5. Verify everyone is clear of the area, start carrier and move to an open area to test functions.
6. With carrier engine running at low idle, engage hydraulics. Operate cutting head, swing and tilt functions to get a feel for the controls that operate these functions.
7. Move to work area and increase carrier engine speed to high idle and begin operation. Raise Limb Cutter 6, tilt and position cutting head as needed for desired cut. Travel at a slow pace. If cutting head stalls, stop carrier and allow head to regain speed before continuing operation.
8. When operation is completed, stop hydraulic flow to cutting head and allow cutting head to stop. Fold cutting head to transport position.
9. Lower Limb Cutter 6 close to ground and stop carrier engine. Install transport strap (A) on upper tilt cylinder pin, support stand (C) and pins.
10. Lower Limb Cutter 6 to the ground.

Maintenance

6. Maintenance

⚠ WARNING

Entanglement and crush hazard.

Follow lockout/tagout procedure before performing service, inspections or maintenance.

Before performing service or maintenance:

- If Limb Cutter 6 is connected to carrier:
 1. Park on a firm and level surface.
 2. Lower Limb Cutter 6 to ground.
 3. Set parking brake.
 4. Stop engine and remove key.
 5. Place a Do Not Operate tag on control panel.
- If Limb Cutter 6 is not connected to carrier:
 1. Verify Limb Cutter 6 is on firm and level ground.

⚠ WARNING

Pressurized fluids can penetrate the skin.


Hydraulic hoses can fail from age, damage and exposure.

Use body and face protection while searching for leaks. A tiny, almost invisible leak can penetrate the skin, thereby requiring immediate medical attention.

Use wood or cardboard to detect hydraulic leaks, never use your hands.

6.1 Lubrication

Grease bearings with a general purpose grease.

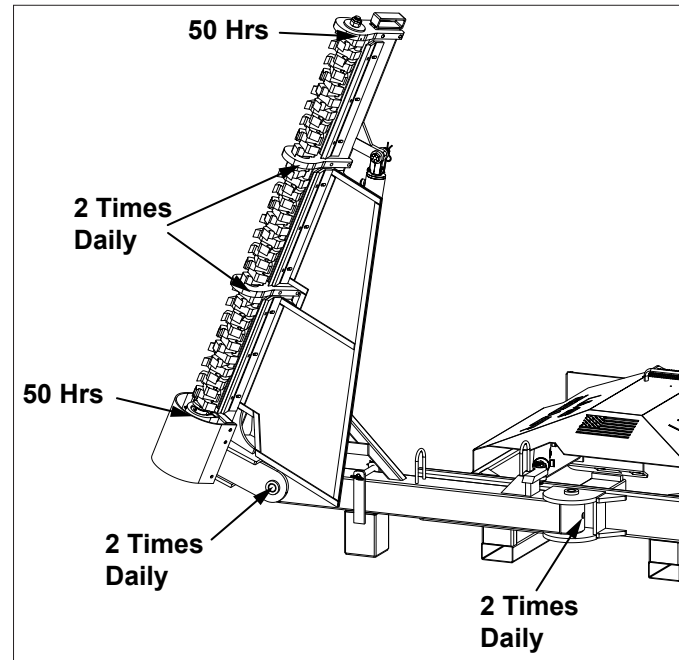

Maintenance

6.2 Replace Cutting Teeth Or Drum Bearing

1. Be sure all teeth are aligned and locked into position. Align any tooth that has ramped up and is out of line before attempting to loosen lock nut. Failure to do so could result in the failure of some parts.

⚠ WARNING

Prevent injury.


Do not stand next to cutting head when removing/ or installing transport strap.

Cutting head could fall when transport strap is removed or installed.


2. Remove transport strap. Stow strap and hardware for reinstallation.
3. Lower cutting head to the ground. Stop engine and remove key. Place a Do Not Operate tag on control panel.

Note: During disassembly, note orientation and sequence of parts for reassembly.


4. Remove locknut (A), washers (B), bushing (C), bearing (D) and housing (E).

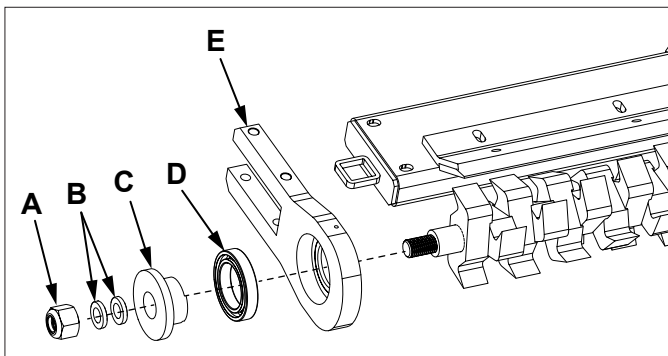

5. Remove teeth and bearings as needed to get to damaged tooth.

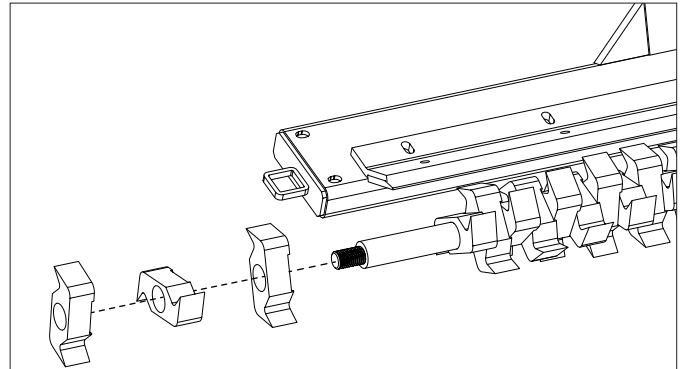

6. Apply anti-seize to exposed area of shaft.
7. Replace teeth with notched side of tooth (F) facing the drive motor. Verify teeth are interlocked together as shown. Always install new tooth for each tooth removed.

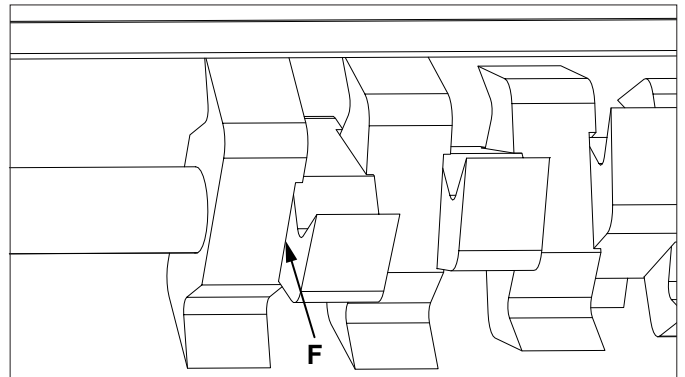

8. Install housing (E), bearing (D), bushing (C), washers (B) and locknut (A).
9. Tighten locknut to 420 lb-ft of torque.
10. Fold cutting head to transport position, disengage hydraulic flow and allow cutting head to stop.
11. Install transport strap and hardware.

Troubleshooting


7. Troubleshooting

PROBLEM	CHECK	SOLUTION
Cutting head does not spin.	Cutting head jammed.	Remove material from cutting head.
	Carrier oil level low.	Check oil level. Add if necessary.
	Carrier oil flow low.	Check flow control on carrier.
Cutting head rotates slow.	Carrier oil level low.	Check oil level. Add if necessary.
	Carrier oil filter plugged.	Replace oil filter.
	Carrier oil flow low.	Set relief pressure to motor specification. Contact your dealer.
Excessive vibration.	Cutting teeth worn or missing.	Replace worn, broken or missing teeth.
	Debris lodged in cutting head.	Remove debris.
Low cutting power.	Low carrier flow or pressure.	Check hydraulic pump flow and pressure. Contact your carrier dealer

Troubleshooting

Parts


8. Parts

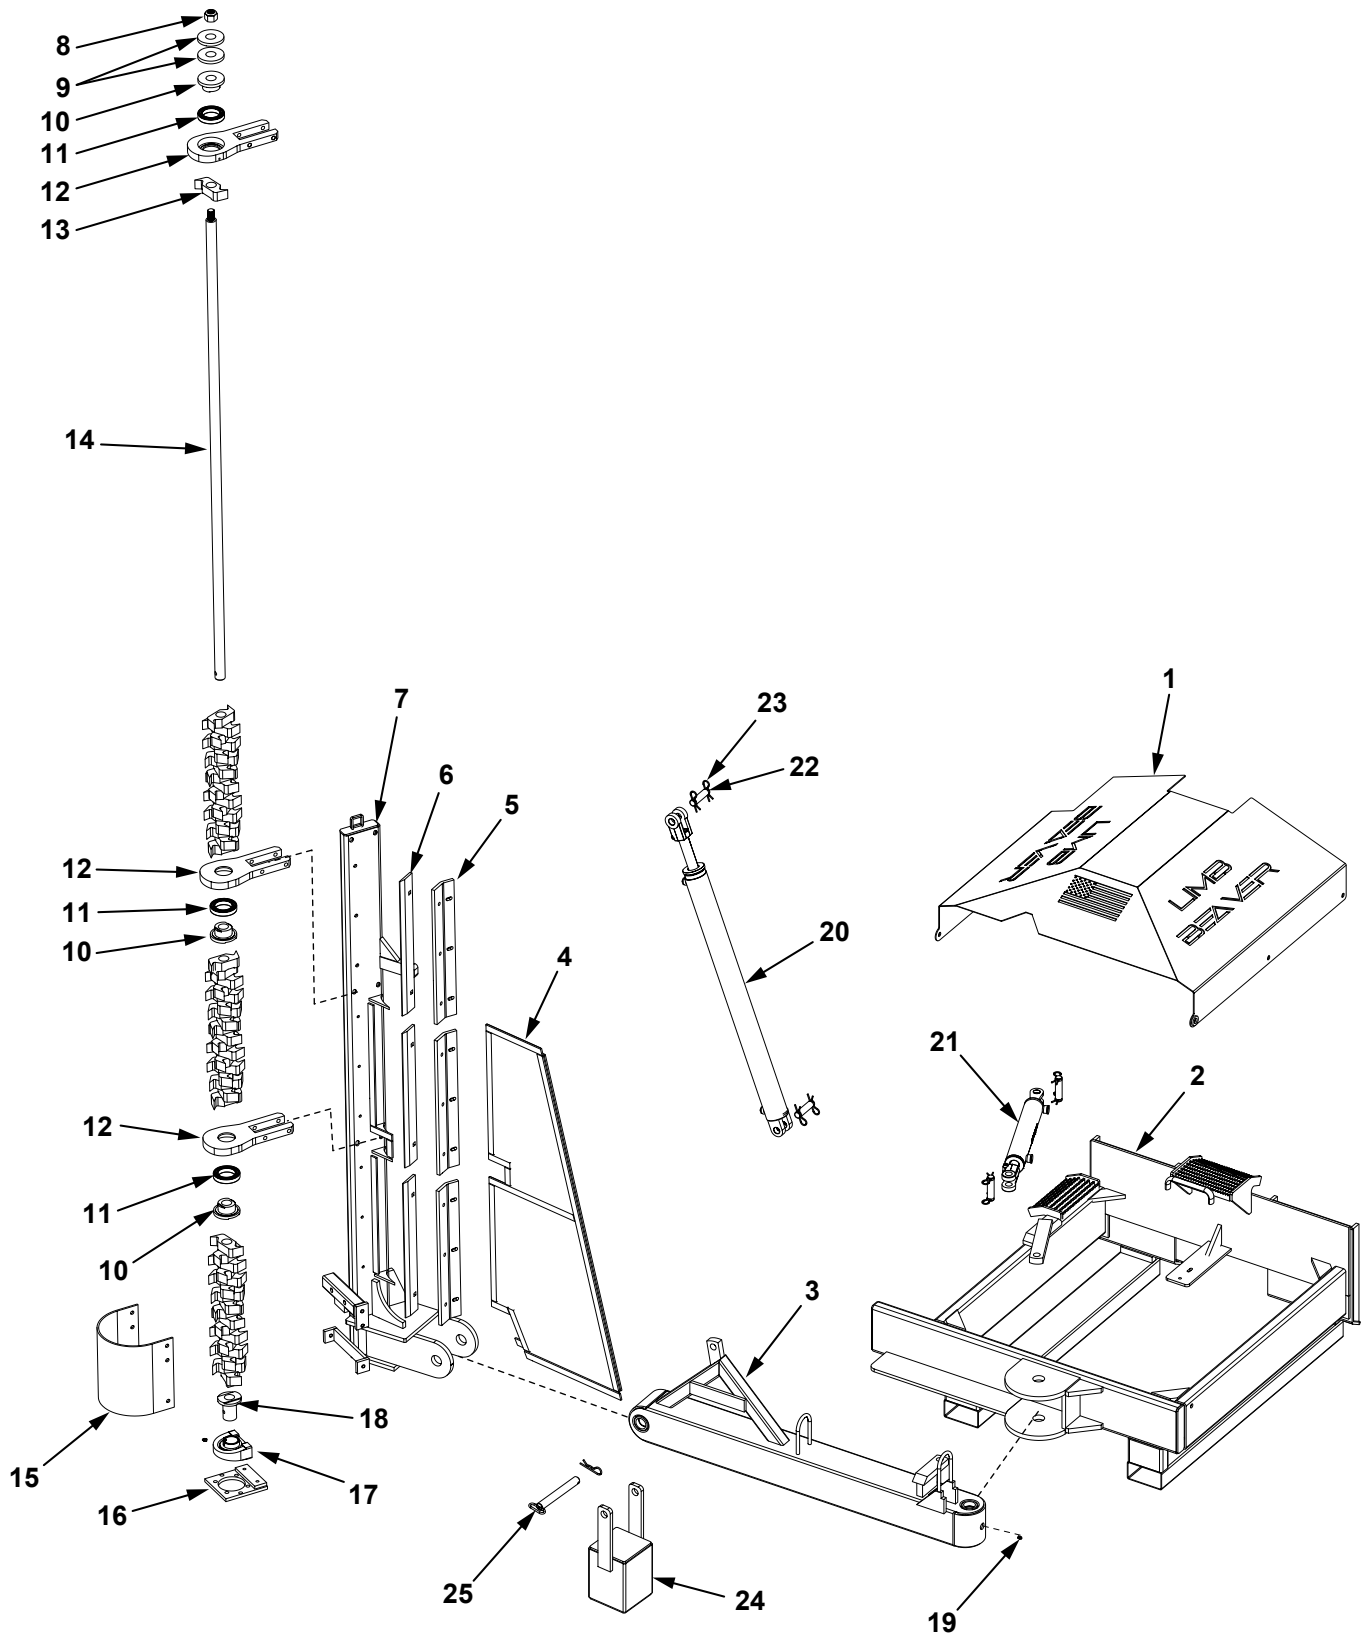

Parts

Item	Part Number	Description	Qty
1	LBF-024	Deck Cover	1
2	LB6 Main Frame	Main Frame Assembly	1
3	LB6 Pivot Arm	Swing Arm Assembly	1
4	LBH-038	Screen	1
5	LBH-030	Cutter Bar Mount	3
6	LBH-035	Shear Bar	3
7	LBH-034	Cutter Bar Assembly	1
8	90630A038	Locknut	1
9	LBH-112	Lock Washer	2
10	LBH-031	Bearing Bushing	3
11	LBH-009	Bearing	3
12	LBH-137	Bearing Housing	3
13	LBH-034	Cutter Teeth	53
14	LBH-020	Main Shaft	1
15	LBH-021	Motor Shield	1
16	LBH-019	Motor Mount Adapter Plate	1
17	LBH-029	Bearing W/Housing	1
18	LBH-160	Spline Coupler	1
19		Grease Fitting	6
20	LBF-029	Tilt Cylinder	1
21	LBF-030	Swing Cylinder	1
22	LBH-046	Pin	4
23		Lock Pin	9
24	LBA-013A	Support Stand	1
25	9031N16	Pin	1
	LBH-039A	Motor, 15 GPM	1
	LBH-039B	Motor, 20 GPM	1
	LBH-039C	Motor, 30 GPM	1
	LBH-039D	Motor, 40 GPM	1
	LBF-028	Hose Kit, 6 Ft, Complete	1
	LBF-028A	Hose, SS To Valve	2
	LBF-028B	Hose, Valve To Motor	2
	LBF-028C	Hose, Tilt Cylinder	2
	LBF-028D	Hose, Swing Cylinder	2
		Wiring Harness - Contact Quick Attach For Correct Harness	1
	LBH-009	Pivot Pin Bushing	2
	300AA0071A-Coil	Valve	1
	LBH-155	Pin, Drive Coupler	1
	LBA-011	Transport Strap	1

Parts

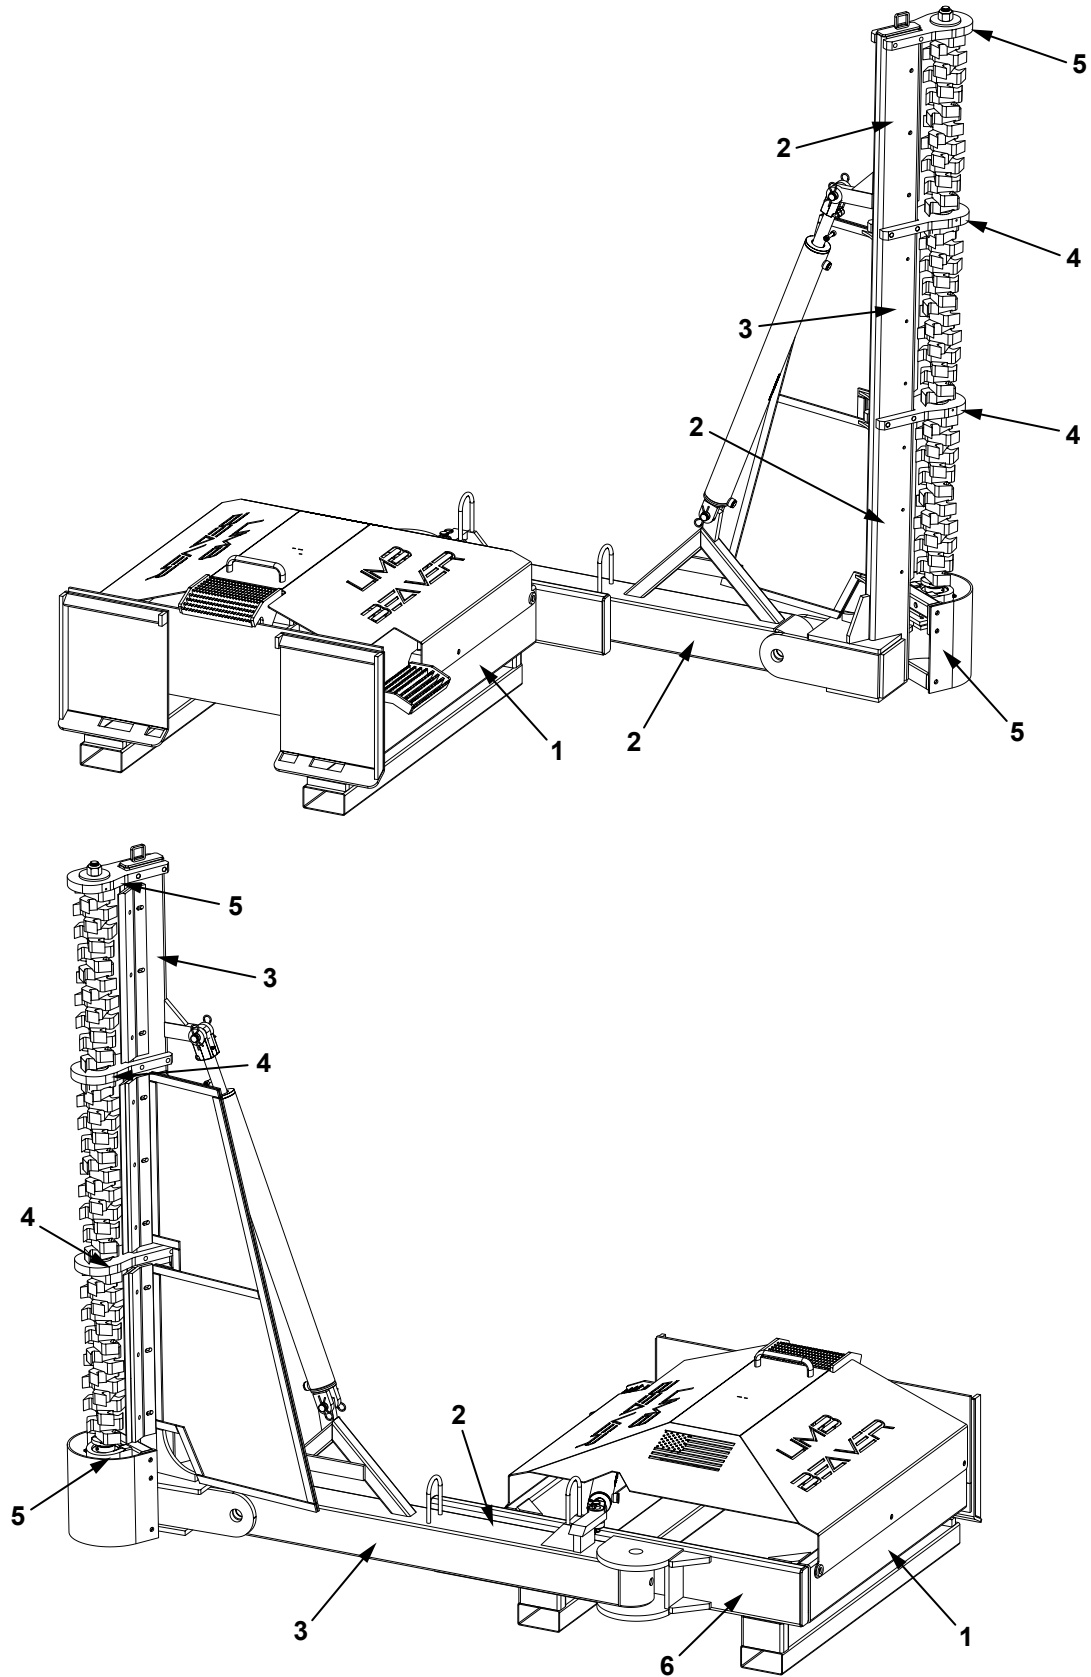

Parts

[illegible]

Warranty

9. Warranty

Quick Attach Attachments LLC warrants to the original purchaser that the product will be free from defects in material and workmanship for one year from the date of purchase by the original purchaser.

Under no circumstances will this warranty cover any claimed defective part or component, which, in the opinion of Quick Attach Attachments LLC has been subjected to misuse, unauthorized modification or alteration, or to an accident.

Obligation of Quick Attach Attachments LLC under this warranty shall be exclusive and be limited to repairing or replacing, free of charge, any part or component that, in the judgment of Quick Attach Attachments LLC, shows evidence of such defect, provided further that such part shall be returned within thirty (30) days from date of failure to Quick Attach Attachments LLC or its designee, transportation charges prepaid. This warranty does not cover any transportation costs.

Under no circumstances will Quick Attach Attachments LLC be liable for any consequential damage or expense of any kind, including loss of profits. Quick Attach Attachments LLC is under no circumstances liable for carrier unit damage of any kind. Quick Attach Attachments LLC is not liable for the maintenance of the product. Quick Attach Attachments LLC will not cover time to diagnose and repair compatibility issues between carrier and attachment.

Quick Attach Attachments LLC reserves the right to make improvements or changes in design or manufacturing specifications at any time, without incurring any obligation to owners of units previously sold. No one is authorized to alter, modify or enlarge this warranty nor the exclusions, limitations and reservations.

Warranty

